


# XT-BC508-2

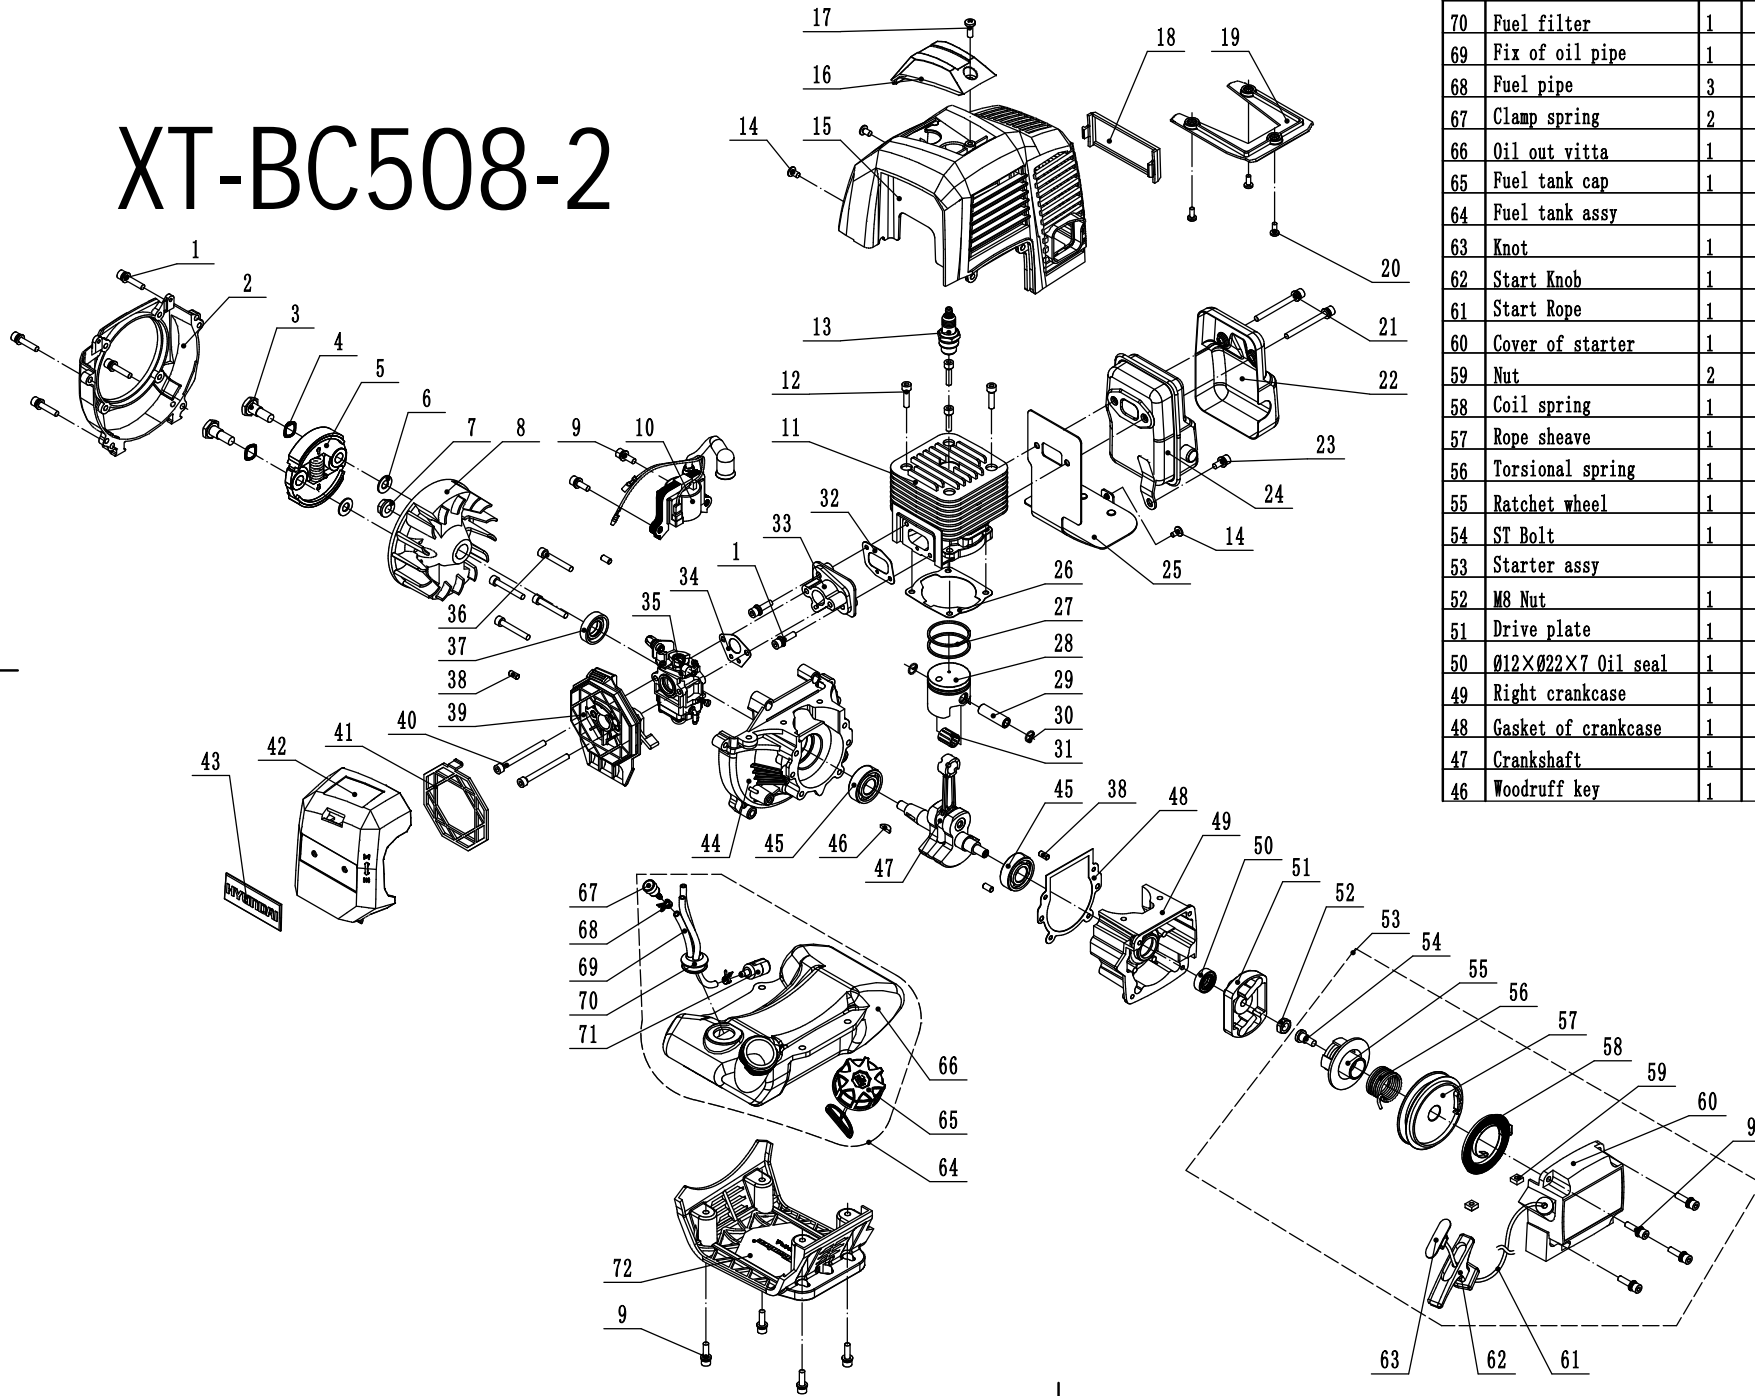

72	Bracket of tank	1	45	Bearing 6202	2
71	Fuel tank	1	44	Left crankcase	1
70	Fuel filter	1	43	HYUNDAI Logo plate	1
69	Fix of oil pipe	1	42	Cover of Air Filter	1
68	Fuel pipe	3	41	Air filter	1
67	Clamp spring	2	40	M5×55 Bolt	2
66	Oil out vitta	1	39	Bracket of ail filter	1
65	Fuel tank cap	1	38	Ø5×10 Straight pin	4
64	Fuel tank assy		37	Ø10×Ø30×7 Oil seal	1
63	Knot	1	36	M5×35 Bolt	4
62	Start Knob	1	35	Carburetor	1
61	Start Rope	1	34	Gasket, Carburetor	1
60	Cover of starter	1	33	Inlet?air?pipe	1
59	Nut	2	32	Gasket, Inlet?air?pipe	1
58	Coil spring	1	31	Bearing	1
57	Rope sheave	1	30	Clamp spring	2
56	Torsional spring	1	29	Piston Pin	1
55	Ratchet wheel	1	28	Piston	1
54	ST Bolt	1	27	Piston Ring	2
53	Starter assy		26	Gasket of cylinder	1
52	M8 Nut	1	25	Insulation mat	1
51	Drive plate	1	24	Muffler	1
50	Ø12×Ø22×7 Oil seal	1	23	M5×10 combination screw	1
49	Right crankcase	1	22	Insulation mat for muffler	1
48	Gasket of crankcase	1	21	M6×55 combination screw	2
47	Crankshaft	1	20	ST4×10 Bolt	3
46	Woodruff key	1	19	Guide cover	1
			18	HYUNDAI Logo plate	1
			17	M5×14 Bolt	1
			16	Top cover	1
			15	Cover of cylinder	1
			14	M4×10 Bolt	3
			13	Spark Plug	1
			12	M5×20 Bolt	4
			11	Cylinder	1
			10	Ignition Coil assy	1
			9	M5×20 combination screw	10
			8	Flywheel	1
			7	M8 Nut	1
			6	Washer	2
			5	Clutch	1
			4	Washer	2
			3	Bolt	2
			2	Side Cover	1
			1	M5×20 Bolt	6
No.	Parts Description	Number	Note		